SPEECHMIKE

LFH3220

without SpeechExec dictation software





EN User manual 3

DE Benutzerhandbuch 17

FR Manuel de l'utilisateur 31

ES Manual del usuario 45

IT Manuale di istruzioni 59

NL Gebruikershandleiding 73

SV Användarhandbok 87



User manual

1	Important	
	-	
2	Your SpeechMike	6
2.1	What's in the box	6
2.2	Overview	7
3 3.1	Get started	8
3.1	Installation	8
4	Use your SpeechMike	9
4.1	Create a recording	9
5	Use more of your SpeechMike	10
5.1	Customize the SpeechMike	10
5.1.1	Customize SpeechMike keys and	
	settings	10
5.1.2	Use application shortcuts	11
5.2	Update the firmware	12
6	Technical data	14
7	Frequently asked questions	15

1 Important

Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained.

Safety

- To avoid a short circuit, do not expose the product to rain or water.
- Do not expose the device to excessive heat caused by heating equipment or direct sunlight.
- Protect the cables from being pinched, particularly at plugs and the point where they exit from the unit.
- Back up your files. Philips is not responsible for any loss of data.

Small children

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals. One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products. Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are

handled properly for their intended use, they are safe to use according to scientific evidence available today. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Cleaning and disinfection

- Unplug the device from the computer before cleaning.
- Use a soft cloth, if necessary dampened with a minimum amount of water or diluted mild soap, to clean the product.
- Products for disinfection of surfaces in clinical areas and patient care equipment, such as surface disinfectant wipes, can be used to clean the device.
- Do not use harsh chemicals or strong detergents.
- Do not rub or strike the surface with anything hard as this may scratch or damage the surface permanently.

Disposal of your old product

- Your product is designed and manufactured with high quality materials and components that can be recycled and re-used.
- When this crossed-out wheeled bin symbol is attached to a product, it indicates that the product is covered by the European Directive 2002/96/EC.
- Become informed about your local separate collection system for electrical and electronic products.
- Act according to your local rules and do not dispose of old products with normal household waste. The correct disposal of old products will help prevent potential negative consequences for the environment and human health.

2 Your SpeechMike

Congratulations on your purchase and welcome to Philips!

To fully benefit from the service that Philips offers, visit our Website for support information such as user manuals, software downloads, warranty information and more: www.philips.com/dictation.

2.1 What's in the box



Dictation microphone



CD-ROM containing software and user manual



USB cable




Quick start guide

2.2 Overview

- (1) Microphone
- (2) Record indicator light
- 3 EOL end-of-letter key,• PRIO priority key
- (4) INS/OVR Insert/overwrite key
- (5) Record key
- 6 Slide switch (fast forward, play/record, stop, rewind)
- (7) Instruction
- (8) Left mouse button
- (9) Right mouse button
- (10) Trackball, left mouse button
- (11) F1, F2, F3 Programmable function keys
- (12) Speaker
- (13) USB cable
- (14) Left mouse button



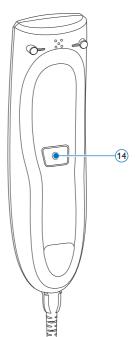

3 Get started

3.1 Installation

Recording and playback of dictations with the SpeechMike requires dictation software such as *Philips SpeechExec* to be installed on the computer. When third-party dictation software other than *Philips SpeechExec* is used, driver software must be installed before connecting the SpeechMike.

Important

Administrator rights are required to install the software. For more help, contact your administrator.

- 1 Turn on the computer.
- Connect the dictation microphone to the computer using the USB cable.
- 3 The New Hardware Found message is displayed and installation will proceed automatically.

⊜ Note

If the message does not appear, verify if the USB port is enabled in the BIOS of the system. See the hardware documentation for details, or contact your hardware vendor.

- 4 Restart the PC when prompted by Windows.
- Insert the installation CD in the CD-ROM drive. The set-up program should start automatically. If it does not, open the CD contents in Windows Explorer and doubleclick the autorun.exe file.
- 6 Click the Install button.
- Follow the on-screen instructions of the set-up program.

4 Use your SpeechMike

This chapter describes how to use the SpeechMike with *Philips SpeechExec* dictation software. If the SpeechMike is used with third-party software other than *Philips SpeechExec*, some features may not be present or function differently. For detailed information, refer to the documentation delivered with the software.

⊜ Note

For best results, speak clearly and keep the microphone about 10 to 15 centimeters (4 to 6 inches) away from your mouth.

4.1 Create a recording

- The dictation microphone must be connected to the computer with the USB cable.
- 2 Start SpeechExec dictation software.
- 3 Press the RECORD key to create a new recording and enter *Record standby* mode.
 - · The recorder window is displayed.
 - The record indicator light flashes red (in overwrite mode) or green (in insert mode).
- Move the slide switch to the PLAY position and start speaking.
 - The record indicator light glows in red (in overwrite mode) or green (in insert mode) while recording.
- For short pauses, move the slide switch to the STOP position. To continue recording, move the slide switch back into the PLAY position.
- To stop recording, move the slide switch to the FORD position and press the RECORD key.
- Press the •EOL/••PRIO key to mark the recording as finished.
 - The dictation file is moved to the Finished dictations folder.
 - The recorder window closes and the work list window is displayed.
- To assign priority status to the recording, press the •EOL/••PRIO key again within half a second.

5 Use more of your SpeechMike

5.1 Customize the SpeechMike

Use the Device Control Center software to customize the SpeechMike to suit individual user needs.

The software allows to assign different functions to each key, enable or disable certain features and also to start and control applications with the SpeechMike.

5.1.1 Customize SpeechMike keys and settings

- The dictation microphone must be connected to the computer with the USB cable.
- 2 If the option to start the Device Control
 Center automatically was selected during
 installation, open the program by clicking
 the icon in the notification area of the
 Windows task bar. To manually start the
 program, open the Windows start menu in
 Windows and select All Programs > Philips
 Speech Control > Philips Device Control
 Center.

The current settings are automatically downloaded from the connected SpeechMike.



On the Device tab, configure device settings and select the function to be assigned to each key.



Click the Upload button to save the new settings.



⊜ Note

The SpeechMike can be reset to its factory default configuration by clicking the Defaults button. Click the Upload button to save the default settings.

Tip

To test settings and key functions, use the *Device* test section on the *Device* tab.

5.1.2 Use application shortcuts

The Device Control Center software allows to start and control other applications with the keys on the SpeechMike.

The Device Control Center software includes pre-installed profiles that make the SpeechMike ready for immediate operation with Dragon NaturallySpeaking speech recognition software and Microsoft Powerpoint. Additional profiles for other applications can be programmed.

- 2 Right-click on the application icon in the notification area of the Windows task bar and verify that 'Acitvate application control' is enabled. If the option is disabled, the configured settings and buttons will not function for any of the target applications.



⊜ Note

Exit Philips SpeechExec software when using application shortcuts to prevent unintentional recording when controlling other applications.

Default profile

The default profile is applied automatically when there is no profile assigned to an application in focus. This profile is set up to control Dragon NaturallySpeaking with your SpeechMike. The following settings are defined:

SpeechMike key	Assigned shortcut
Record	Record (push to dictate)
PLAY Play	Play from cursor position
≪ Rewind	Move cursor backwards
>> Fast forward	Move cursor forwards
•EOL/••PRIO	Mark backwards
INS/OVR	Open correction window
-i- Instruction	Choose 2

Powerpoint profile

Use this profile to control Powerpoint presentations with the SpeechMike. The following settings are defined:

SpeechMike key	Assigned shortcut
Record	Black screen
PLAY Play	White Screen
≪ Rewind	Go to previous slide
>> Fast forward	Go to next slide
•EOL/••PRIO	End slide show
INS/OVR	Show/hide cursor

⊜ Note

Philips cannot guarantee the proper function of all assigned shortcuts, since shortcuts can differ among versions and languages.

Program a custom profile

It is possible to program shortcuts for other applications to control application functions with the keys of the SpeechMike.

- The dictation microphone must be connected to the computer with the USB cable.
- 2 If the option to start the Device Control
 Center automatically was selected during
 installation, open the program by clicking
 the icon in the notification area of the
 Windows task bar. To manually start the
 program, open the Windows start menu in
 Windows and select All Programs > Philips
 Speech Control > Philips Device Control
 Center.




- On the tab *Application control*, click the button to create a new profile.
- 4 Browse and select the application executable and click on OPEN. A profile for the selected application will be added to the list of profiles.

⊜ Note

Exit the target application during configuration. Open the application when the device configuration settings are saved.

Select a button from the button colum and click the icon to assign a shortcut. You can assign different shortcuts for pressing and releasing a key.

The shortcut editor window is displayed.

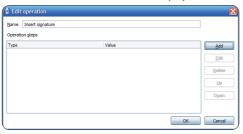

- 6 Enter name for the shortcut and click the Add button add an opertion for the shortcut. The following options are available:
 - Hotkey: Assign a keyboard shortcut
 - Text: Enter the text to be inserted when a key on the SpeechMike is pressed
 - Start an application by pressing a key on the SpeechMike
 - Mouse button

- · Dragon NaturallySpeaking command
- Delay



- 7 You can add one operation or a sequence of operations for every shortcut.
- 8 Click the Apply button to save the new settings.

⊜ Note

The Device Control Center cannot be used to program application shortcuts for Philips SpeechExec software. Shortcuts for Philips SpeechExec can be configured in the General settings menu of SpeechExec. See the SpeechExec application help for more information.

(3) Tip

Application control configuration settings can be saved into files and imported later to apply the same configuration settings to several devices.

5.2 Update the firmware

Your SpeechMike is controlled by an internal program called firmware. Newer versions of the firmware may have been released after you have purchased the SpeechMike.

- Download the firmware update for your SpeechMike model from www.philips.com/ dictation.
- The dictation microphone must be connected to the computer with the USB cable.
- If the option to start the Device Control Center automatically was selected during installation, open the program by clicking the icon in the notification area of the

Windows task bar. To manually start the program, open the Windows start menu in Windows and select All Programs > Philips Speech Control > Philips Device Control Center.

- 4 On the *Device* tab, click on Firmware update.
- 5 Click the Import button and select the folder with the firmware files to be imported.
- 6 Click the Upgrade button to install the new firmware.
 - The firmware upgrade takes about 30 seconds.
 - During firmware upgrade the indicator lights of the SpeechMike will be flashing.

Warning

Do not disconnect the dictation microphone from the computer during firmware upgrade. This might damage your product.

6 Technical data

Connectivity

USB: Mini-USB 2.0

Audio recording

- Microphone type: electret condenser microphone
- · Microphone cartridge: 10 mm
- · Characteristic: uni-directional
- Frequency response: 200-10000 Hz
- Sensitivity: -37 dBV @ 1 kHz
- Signal-to-noise ratio: > 70 dBA

Sound

- · Speaker type: built-in round, dynamic speaker
- · Speaker diameter: 30 mm
- Acoustic frequency response: 300-7500 Hz
- Speaker output power: > 200 mW

System requirements

- Processor: Pentium III, 500 MHz (Pentium IV or similar, 1 GHz recommended)
- RAM memory: 512 MB (1 GB recommended)
- Hard disk space: 10 MB for Speech Control, 100 MB for SpeechExec (optional), 250 MB for Microsoft .NET Framework
- Operating system: Windows 7/Vista/XP
- · Free USB port
- · DVD-ROM drive

Green specifications

- Compliant to 2002/95/EC (RoHS)
- · Lead-free soldered product

Operation conditions

- Temperature: 5°-45° C / 41°-113° F
- Humidity: 10 %-90 %

Dimensions

- Product dimensions (W × D × H):
 45 × 165 × 30 mm / 1.8 × 6.5 × 1.2 inch
- Weight: 0.120 kg / 0.265 lb
- · Cable length: 3 m / 9.8 ft

Design and finishing

- · Material: antimicrobial surface
- · Color(s): warm grey/black

Accessories

- · USB cable
- CD-ROM containing software and user manual
- · Quick start guide

7 Frequently asked questions

The operating system stops responding after restart

Using the Philips SpeechMike together with certain USB hubs may cause the operating system to stop responding when the computer is started.

Unplug the SpeechMike before starting the PC and reconnect it afterwards. We recommend replacing the USB hub or connecting your SpeechMike directly to the USB port of the computer.

The SpeechMike is completely without function

Some computer providers limit the output power of USB ports to 100mA. These ports may not provide enough power for the SpeechMike to function properly.

Connect the SpeechMike via a self-powered hub.

The SpeechMike is connected to the computer but sound will play on the computer's speaker only

Windows XP can support only one playback device at a time and may require setting the playback device back to "SpeechMike" if another playback device was enabled after the SpeechMike was installed.

- Set via Start > Control Panel > Sound and Audio Devices > Audio (tab)
- Or, right-click the speaker icon if it's in the toolbar and select Adjust Audio Properties

Windows Vista and Windows 7 can support more than one playback device at a time, but if you disable the device for playback it is also disabled for recording. You may need to right-click and select "Show disabled devices" to change the setting.

- Set via Start > Control Panel > Sound > Playback (tab)
- Or, right-click the speaker icon if it's in your toolbar and select playback devices

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Philips may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Canadian notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis Canadien

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Declaration of Conformity

Model Number: LFH3200, LFH3205,

> LFH3210, LFH3215, LFH3220, LFH3225, LFH3300, LFH3310.

LFH3320

Trade Name: Philips SpeechMike

Responsible Party: Philips Speech Processing Address: 64 Perimeter Center East.

Atlanta, GA 30346, USA

Telephone number: 888-260-6261

Website: www.philips.com/dictation

LFH3200, LFH3205, LFH3210, LFH3215, LFH3220, LFH3225, LFH3300, LFH3310, LFH3320



Tested to comply with FCC standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2)This device must accept any interference received, including interference that may cause undesired operation.

CE Declaration of Conformity

Philips confirms that the product corresponds to the relevant guidelines of the European Union.



Discover the comprehensive range of professional dictation products from Philips www.philips.com/dictation

Specifications are subject to change without notice.

Trademarks are the property of Royal Philips Electronics or their respective owners.

© 2010 Royal Philips Electronics. All rights reserved.

Document Version 1.0, 21/07/2010.